

DISHWASHER CLEANING – Oasis Pro 20 Premium

READ BEFORE STARTING PROCEDURE



Use your cleaning tools –
Blue paper towels

Please reference the relevant
Safety Data Sheets, risk
assessment and safe system
at work documents.



WS.TC.053.01

1

Always wear correct PPE



2

Turn off power to
dishmachine, drain
fully and remove the
detergent feed pipe



3

Remove parts to
be cleaned,
including rinse
arms and filters



4

Use diluted product
and blue paper towel
to clean all
internal/external
surfaces



5

Rinse all surfaces
with clean water
and blue paper
towel



6

Replace the clean
parts of the
dishwasher



7

Re-attach
detergent feed pipe
and run machine
once before filling
with items to clean



Helpline: 02920 855540

ECOLAB[®]