

DISHWASHER DESCALING – Delimer EL60

READ BEFORE STARTING PROCEDURE



Use your cleaning tools –
Blue paper towels

Please reference the relevant
Safety Data Sheets, risk
assessment and safe system
at work documents.



1

Always wear correct PPE



2

Turn off power to
dishmachine, drain
fully and refill with
clean water




3

Dispense 3 pushes
(pelican pump) per
10L of water into
wash tank



4

Run through
several cycles

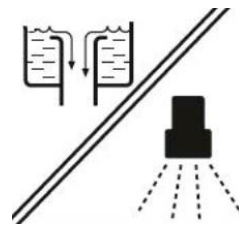

5

Drain and rinse
dishwasher before
refilling for use.
Place feed tube
back into the
detergent bottle

