

Electric Wash Hand Basin Instructions

Setting up for use

DO NOT plug the wash hand basin in or turn it on until it has been filled

1. Release the two catches situated either side that secure the upper section to the lower section.



2. Lift the upper section until it is clear of the lower section and move it to the side, resting it on the lower section.



3. Pour clean water into the lower tank. Do not fill above the MAX fill mark (10 l) otherwise water will flow out of the overflow hole.



4. Move the upper section back over the lower section, aligning the container seams. Slot the two sections together and close the latches.



5. Plug the basin in and turn it on using the switch near the foot pedal.



6. Test it by putting your food in the foot slot. Allow a few seconds for water to be heated and pumped up.



There must be **hand soap** and **paper towel** available at each wash hand basin. Make sure this is located in a convenient adjacent location.

Emptying the waste water container

Before refilling the wash hand basin you will need to empty the waste bucket

Lift the bowl out by its edge, raising it off the top section and sliding it up the tap. When it is high enough, rotate the bowl until you can access the waste water container. Remove, empty and replace the container, then replace the bowl.

