

Delimer EL60 – DISHWASHER DESCALING

HS/TC/007/03 – August 2017



READ BEFORE STARTING



Wear PPE in each step

GLOVES

You MUST refer to the CPAs & Task Cards for your PPE Requirements

Not a hazardous substance or mixture

1

Disable detergent by safely removing feed tube from bottle



2

Ensure dishwasher has been drained and refilled with clean water



3

Dispense 3 pushes 30ml (pelican pump) per 10L of water into wash tank



4

Run dishwasher for 3-4 cycles



5

Inspect dishwasher and repeat if necessary



6

Drain and rinse dishwasher before refilling for use



7

Place feed tube back into detergent bottle

