

AUTOMATIC FEED DETERGENT SOLIDS

Solid Mega/Solid Power XL/Solid Protect/Solid Clean M

HS/TC/010/04 – January 2019



READ BEFORE STARTING



Wear PPE in each step
GLOVES & GOGGLES


You MUST refer to the CPAs & Task Cards for your PPE Requirements



For use with Ecolab dosing unit:

1

Refill the product compartment when the alarm sounds

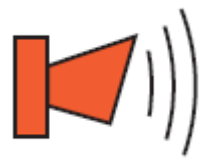

2

Switch off the dosing system by pressing the enter button




3

Remove empty capsule from dispenser and crush for easy disposal



4

Pull and twist off cap from new product capsule

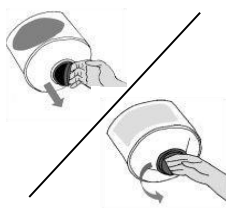

5

Place the capsule with the opening downward in the dosing unit



6

Switch on the dosing system by pressing the enter button



If in any doubt about the PPE required, please refer to the separate COSHH Product Assessment or your HSE Manager